


SS497H25W BAND METHOD

MODE	CON1-1(mini jump)	FREQUENCY RANGE
HAM ⇔ CB	REMOVE	HAM:28.000-29.690MHz CB :25.165-29.695MHz
HAM ONLY	INSTALL	HAM:28.000-29.690MHz

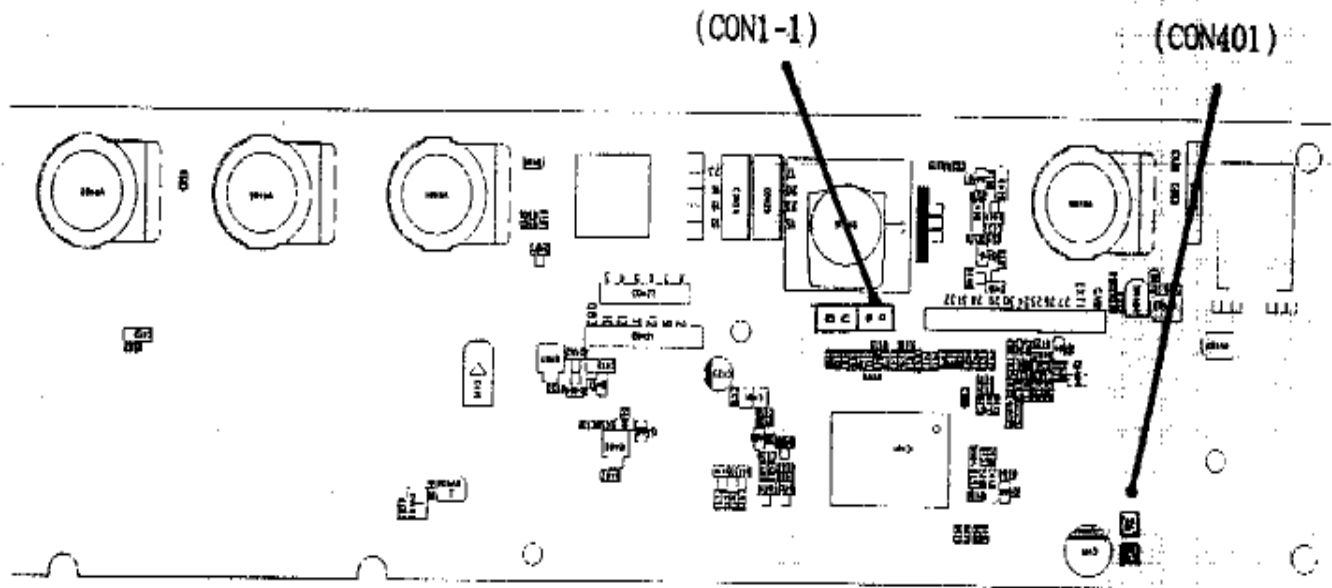

※ THERE ARE NO MAKINGS OF "CON1-1" ON THE ACTUAL PCB.

CHANNEL EXPANSION HAM-497H25

1. DISCONNECT POWER LEAD FROM THE POWER SUPPLY.
2. CHANGE(MODIFICATION) FROM CPU MODE AS PER ABOVE TABLE.
3. RESET: MAKE A SHORT CIRCUIT CON401 BY A PINSET.
4. CONNECT POWER LEAD TO THE POWER SUPPLY AND THEN TURN ON. THEN HAM FREQUENCY WILL BE DISPLAYED.
5. PRESS "FUNC" SIMPLY AND THEN PRESS "2(CALL)" FOR MORE THAN 3 SEC. THEN THE UNIT BECOME 454 CHANNEL CB AND LCD SHOW CHANNEL NO ONLY.
6. FOR FREQUENCY DISPLAY PRESS "FUNC" AND "2(CALL)" SIMPLY EACH. FOR CHANNEL DISPLAY AGAIN REPEAT THIS PROCESS(6). FOR HAM FREQUENCY ONLY REPEAT PROCESS(5).
7. BUTTON "2(CALL)"
BAND SWITCH AT 454 CHANNEL CB.
CALL SWITCH AT HAM (10 METER) MODE.